
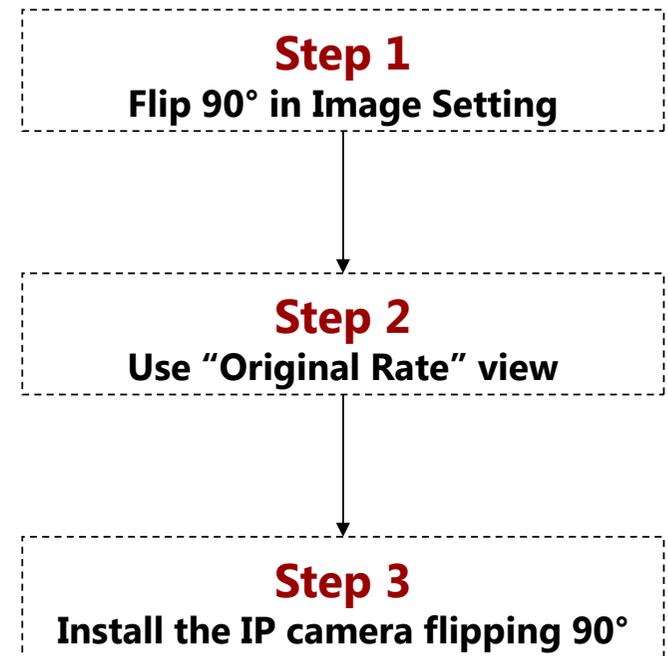


How to set the corridor mode?

Equipment Model	Firmware	Course Version	Date
XVR8816S	V3.218.0000.0.R.20170613	V1.0	2017/11/30
IPC-HFW5231EP-Z12-S2	V2.460.0000.15.R.20170907	V1.0	2017/11/30

• How to set the corridor mode?


- **Corridor Mode** is often used for long and narrow scenes. Costs are cut in half as one camera can cover an entire hallway instead of two.

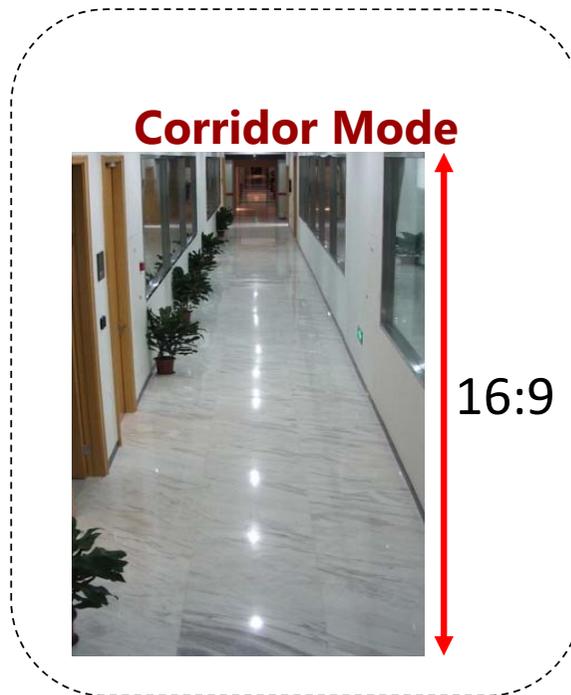

• How to set the corridor mode?

Flip 90° setup & flip camera

Original Rate

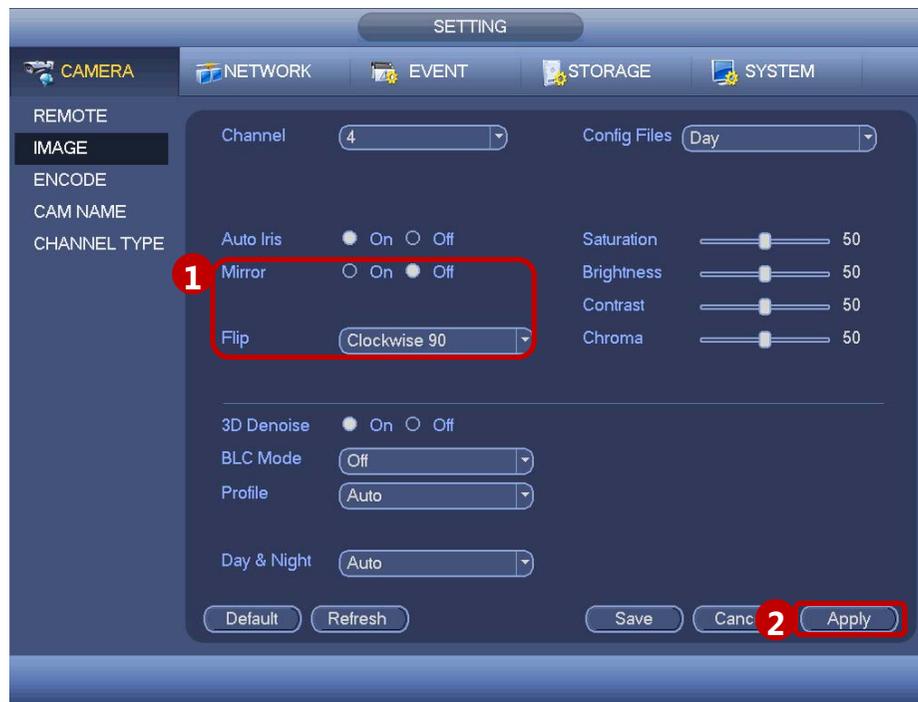


Corridor mode(for **IP cameras only**): flip the image to make the image suitable for surveilling corridor.

- ① First of all, when mounting, flip the camera 90° clockwise.
- ② Enable the flip function, meanwhile set the angle to be clockwise 90°.
- ③ Click "Apply" to activate the setup.

• How to set the corridor mode?

Flip 90° setup & flip camera

Original Rate

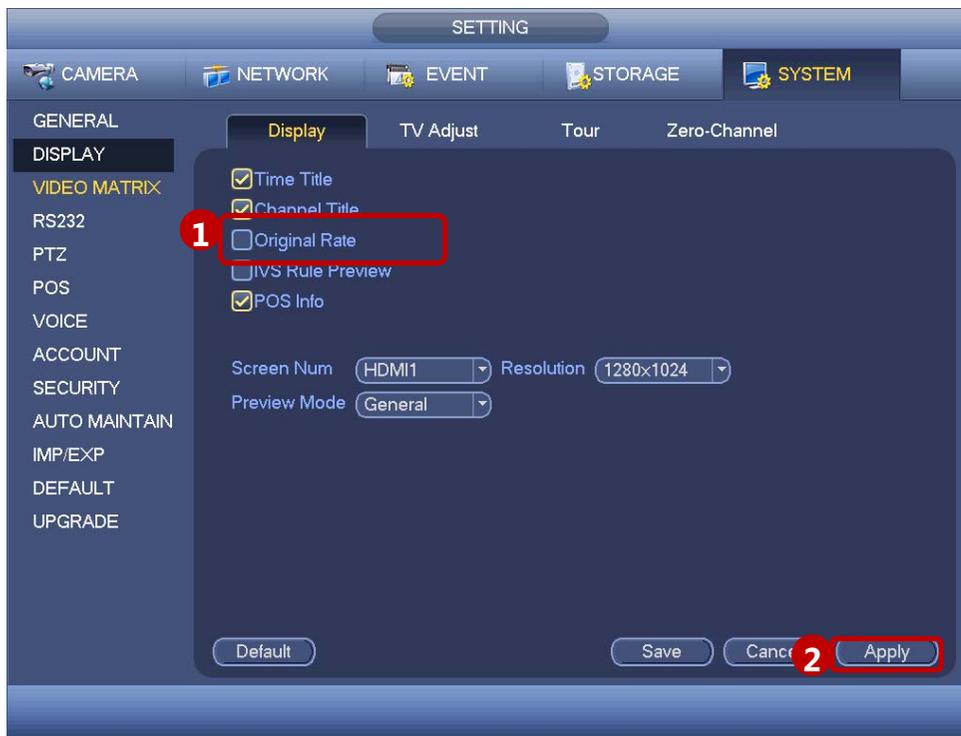

- ① Go back to the MAIN MENU->SYSTEM->DISPLAY->Display to select the “**Original Rate**” or go back to the split view, right click in the corresponding channel, in the Display sub menu select “Original Rate”.
- ② Click “Apply”.
- ③ **Camera Installation:** flip the camera device 90°